


## INSTALLATION INSTRUCTIONS

(INSPECT PARTS BEFORE INSTALLING)

- STEP 1. INSTALL PLAIN HEX NUT INTO HEX SIDE OF ZINC. NUT MUST BOTTOM ON BRASS WASHER AND BE AT LEAST 1/32" ABOVE ZINC, AS SHOWN IN SKETCH BELOW.

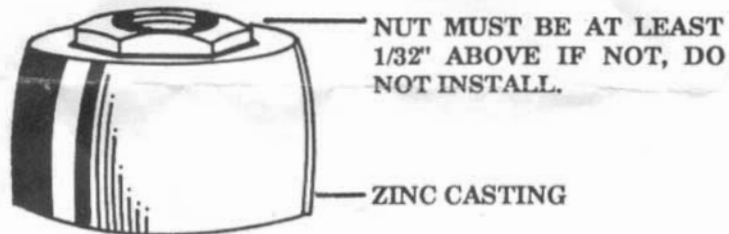

- STEP 2. REMOVE NUT FROM ZINC, INSTALL NUT ON SHAFT AND TIGHTEN WITH WRENCH.
- STEP 3. INSTALL ZINC WITH HEX SIDE OVER NUT.
- STEP 4. INSTALL CASTELLATED NUT AND TIGHTEN WITH SOCKET WRENCH.
- STEP 5. INSTALL COTTER PIN.
- STEP 6. WHEN INSTALLATION IS COMPLETED, INSPECT TO MAKE SURE THAT ZINC DOES NOT BOTTOM ON PROP. YOU MUST BE ABLE TO SEE FIRST NUT THAT WAS INSTALLED.

